 
 


OPERATION MANUAL

Illustration

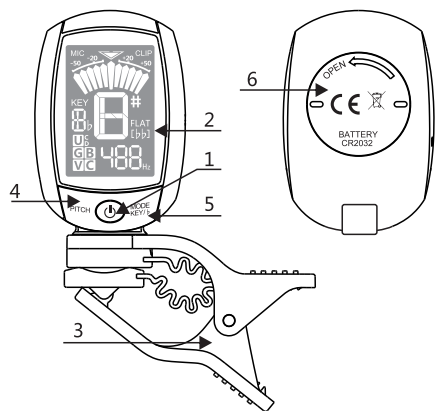


Display illustration

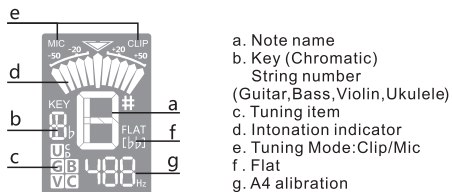

1. Power/Tuning Way : On/Off,Mic/Clip
2. LCD Screen
3. Instrument Clamp
4. Pitch Calibration
Press: continuously up 1HZ
Long press: continuously up 10HZ
5. Mode Key :
Long press : Select Chromatic,Guitar,Bass,Violin,Ukulele
Press: In Chromatic, is change different key. In others mode is adjust FLAT.
6. Battery Door

Installing the battery illustration

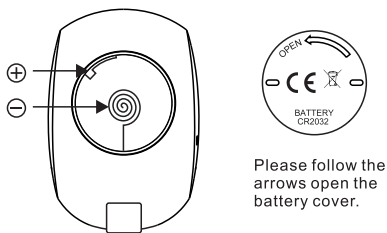

1. Please push open the battery cover according to the illustration. insert a CR2032 battery (attention to the "+" and "-"charges in illustration.) The battery life may differ according to the conditions of use.
2. If the unit appears self-checking frequently, please take battery out and wait for 1-3minutes to reinstall the battery.
3. Please change battery when the display screen of the unit become dark or tuning react slowly , please replaced a new battery in time.
4. Please do not arbitrarily discard the waste battery.

Operation

1. Power on the button, press again you can choose of tuning way MIC/CLIP
2. Long Press the "Mode key"button ,Choosing tuning items you want. (Chromatic,Guitar,Bass,Violin,Ukulele)
3. Clip the tuner on the strongest vibrating part of your instrument.
4. As soon as you play a note, the display will indicate the note and string number you are playing and how close to pitch you are.
The left side of the display indicates is Flat.
The right side of the display indicates is Sharp.
The Middle of the display(Green Color)is in Tune.
5. In Chromatic mode, the screen will display 12 kinds of standard note name and 4keys C, F, B \flat , E \flat .
6. In Guitar ,Bass ,Ukulele ,Violin mode, the screen will display the empty of note name ,string number and two FLAT choice.
7. The unit will shut off automatically if there is no signal within 5 minutes.
8. The unit will self-motion memory last time your setting. If reinstall the battery ,the unit automatic return to initial setting.

Specifications

Tuning : Chromatic, Guitar, Bass, Ukulele, Violin
 Tuning way : MIC, Clip.
 Tuning range : A0(27.5Hz)~C8(4186Hz)
 Precision : ± 1 cent
 Calibration : 410Hz~490Hz , A4=440Hz
 Tuning key : C, F, B \flat , E \flat (Chromatic)
 Flat : b, bb (Guitar, Bass)
 Power : 3V ,Battery (CR2032) $\times 1$
 Dimension : 91mm \times 64mm \times 24mm
 Weight : 28g
 Accessories :Operation manual,
 1 piece battery (CR2032)