
 


OPERATION MANUAL

ILLUSTRATION

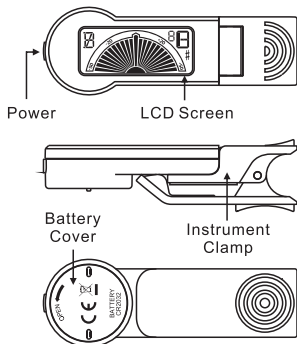

INSTALLING THE BATTERY ILLUSTRATION



1. Please open the battery cover , insert a CR2032 battery (attention "+"/ "-" charges).
2. If the unit doesn't work , please take battery out and reinstall the battery.
3. When the screen become dark or tuning slowly , replaced a new battery in time.
4. Please do not arbitrarily discard the waste battery.

OPERATION

1. Press the power button and hold on to turn on (off) the tuner.
2. Press the power button continuously to select tuning item out of Chromatic, Guitar, Bass, Ukulele and Violin.
3. Clip on strongest vibrating part of your instrument.
4. Play a single note, the display will show the note name and the meter moves.
if intonation indicator points to left : the note is flat
if intonation indicator points to right : the note is sharp
if intonation indicator points to middle : the note is in Tune
5. The unit will shut off automatically if there is no signal within 5 minutes.
6. The unit will self-motion memory last time your setting , if reinstall the battery , the unit automatic return to initial setting .

SPECIFICATIONS

Tuning : Chromatic, Guitar, Bass, Ukulele, Violin
Tuning way : Clip
Tuning range : A0(27.5Hz)~C8(4186Hz)
Precision : ± 1 cent
Calibration : A4=440Hz
Power : 3V , Battery (CR2032) $\times 1$
Dimension : 77mm \times 27mm \times 22mm
Weight : 20g
Accessories : Operation manual,
1 piece battery (CR2032)