 
 


OPERATION MANUAL

ILLUSTRATION

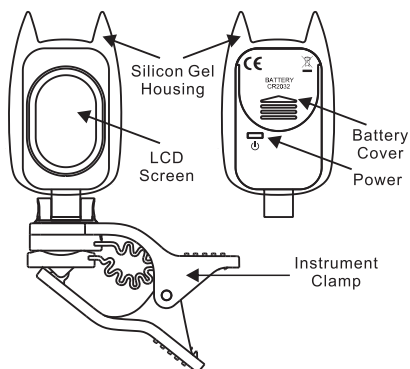

INSTALLING THE BATTERY ILLUSTRATION

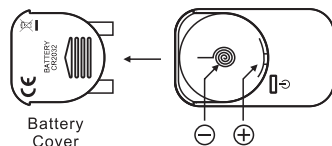

1. Please open the battery cover, insert a CR2032 battery (attention "+" / "-" charges).
2. If the unit doesn't work, please take battery out and reinstall the battery.
3. When the screen become dark or tuning slowly, replaced a new battery in time.
4. Please do not arbitrarily discard the waste battery.

OPERATION

1. Press the power button and hold on to turn on (off) the tuner.
2. Press the power button continuously to select trning item out of Chromatic, Guitar, Bass Ukulele and Violin.
3. Clip on strongest vibrating part of your instrument.
4. Play a sigle note, the display will show the note name and the meter moves.
if intonation indicator points to the left: the note is flat
if intonation indicator points to the right: the note is sharp
if intonation indicator points to the middle: the note is in Tune
5. The unit will shut off automatically if there is no signal within 5 minutes.
6. the unit will self-motion memory last time your setting ,if rein stall the battery ,the unit automatic return to initial setting .

 
SPECIFICATIONS

Tuning : Chromatic, Guitar, Bass, Ukulele, Violin
 Tuning way : Clip
 Tuning range : A0(27.5Hz)~C8(4186Hz)
 Precision : ± 1 cent
 Calibration : A4=440Hz
 Power : 3V ,Battery (CR2032) $\times 1$
 Dimension : 52mm \times 32mm \times 21mm(without clip)
 Weight : 30g
 Accessories : Operation manual,
 1 piece battery (CR2032)


產品使用手冊

請您首次使用之前閱讀本說明書

產品說明圖

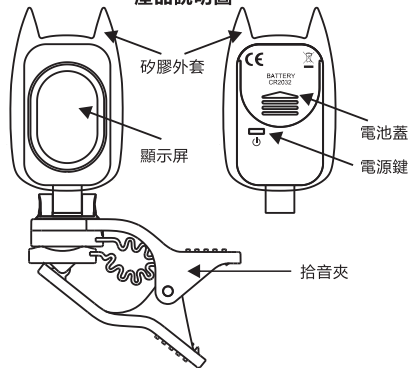

電池安裝示意圖

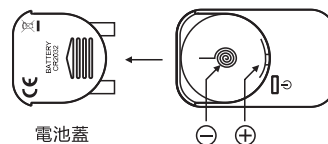 

1. 按箭頭方向旋開電池蓋，按圖示正負極方向，放入一枚CR2032鈕扣電池。
2. 如機器出現當機或者頻繁自檢，可能是由於電池安裝不正確，請重新裝入即可正常使用。
3. 如顯示暗淡或調音遲鈍，請及時更換電池。
4. 請勿隨意丟棄廢棄電池！

產品操作說明

1. 裝入電池後長按電源鍵可以開/關機，短按電源鍵可以切換調音模式（屏幕左上角顯示）。
C=Chromatic(十二平均律)；G=Guitar(吉他)；B=Bass(貝斯)；U=Ukulele(烏克麗麗)；V=Violin(小提琴)。
2. 將調音器夾在樂器震動明顯的部位。
3. 使樂器發出一個音，屏幕右上角將顯示這個音的音名和弦序，屏幕中部的音準指針將指示這個音的音高。根據指示調整樂器：
指針偏左，音偏低；指針偏右，音偏高；
指針正中，音準確。
4. 五分鐘內無任何操作或信號輸入，將自動關機進入省電模式。
5. 開機自動記憶最後一次參數設置，重新裝電池自動恢復初始設置。

產品規格說明

校音項目：十二平均律、吉他、貝斯、烏克麗麗、小提琴。
 拾音模式：震動拾音
 校音範圍：A0 (27.5Hz) ~ C8 (4186Hz)
 校音精度： ± 1 cent
 A4 範圍：A4=440Hz
 電 源：CR2032鈕扣電池，1枚
 產品尺寸：52mm \times 32mm \times 21mm(不含夾子)
 產品重量：30g(不含電池)
 標配附件：使用說明書，CR2032電池1枚