
 


# INSTRUCTIONS

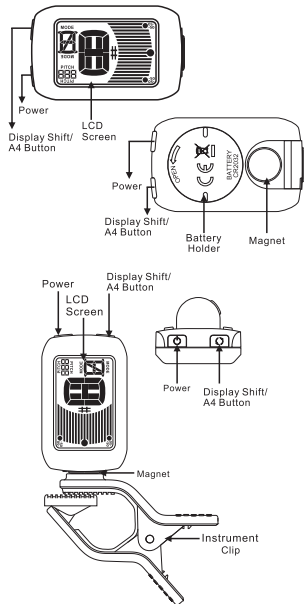

## BATTERY INSTALLATION

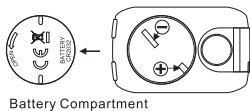

Open the battery cover and insert a new CR2032 battery with the "+" sign facing up.

If the tuner does not respond, remove and reinstall the battery. When the screen starts to fade, it's time to replace the battery. Please dispose of used batteries responsibly.

## SPECIFICATIONS

Tuning Modes: Chromatic, Guitar, Bass, Ukulele and Violin

Tuning Range: A0(27.5Hz)~C8(4186Hz)

Accuracy :  $\pm 1$  cent

A Reference : 435Hz-445Hz

Power : 3V CR2032 (included)

Weight : Tuner without clip - .4oz  
with clip - .8oz

## OPERATION

1. Press the power button and hold down for a second or two to turn the tuner on or off. To change the tuning mode, press the button until you get to the mode you want , B, V, U, C, or G.
2. To use without the clip, remove the tuner from the clip and attach it magnetically to the back of a machine head or any other metal part. To use the clip, reattach the tuner and clip the unit to the guitar headstock or a convenient to see part of any instrument.
3. Tuning your instrument: Play a note. When a note is in tune, the display will change color. When used with a stringed instrument, the string number will also appear.
4. To change the A4=440 calibration, press the A4 button. Pressing and holding this button will also flip the display making it easier to read in many situations.
5. The tuner will shut down automatically if not used for 5 minutes.

A 7/16" (11mm) round self-adhesive metal disk is included with your tuner. This is to be used with nonferrous machine heads, acoustic guitar, violin tops, etc Peel off the paper backing to attach. The adhesive will not damage your instrument.