 



產品使用手冊

請您首次使用之前閱讀本說明書

產品說明圖

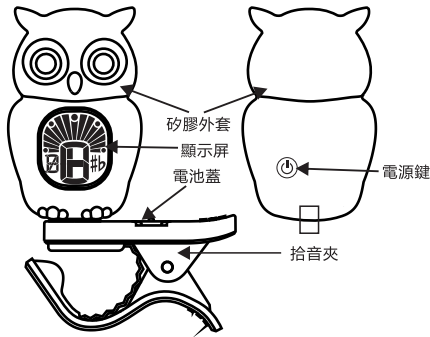

 電池安裝示意圖

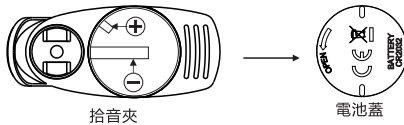

1. 按箭頭方向旋開電池蓋，按圖示正負極方向，放入一枚CR2032鈕扣電池。
2. 如機器出現關機或者頻繁自檢，可能是由於電池安裝不正確，請重新裝入即可正常使用。
3. 如顯示暗淡或調音遲鈍，請及時更換電池。
4. 請勿隨意丟棄廢棄電池！

產品操作說明

 
1. 裝入電池後長按電源鍵可以開/關機，短按電源鍵可以切換調音模式（屏幕左下角顯示）。
C=Chromatic(十二平均律)；G=Guitar(吉他)；B=Bass(貝斯)；U=Ukulele(烏克麗麗)；V=Violin(小提琴)。
2. 將調音器夾在樂器震動明顯的部位。
3. 請使樂器發出一個單音，此時這個音的音名和所代表的弦序將會顯示在屏幕上，並且音準指針將會指示相應的刻度。根據指示調整樂器，直到校準。
當指針偏到左邊時：音偏低(背光顯示橙色)。
當指針偏到右邊時：音偏高(背光顯示橙色)。
當指針指示正中時：音準確(背光顯示綠色)。
4. 五分鐘內無任何操作或信號輸入，將自動關機。
5. 開機自動記憶最後一次參數設置，重新裝電池自動恢復初始設置。

產品規格說明


校音項目：十二平均律、吉他、貝斯、烏克麗麗、小提琴
拾音模式：震動拾音
校音範圍：A0 (27.5Hz) ~ C8 (4186Hz)
校音精度：±1 cent
電 源：CR2032鈕扣電池，1枚
產品尺寸：62mm×33mm×51mm(含夾子)
產品重量：33g(含夾子)
標配附件：使用說明書，CR2032電池1枚

OPERATION MANUAL

ILLUSTRATION

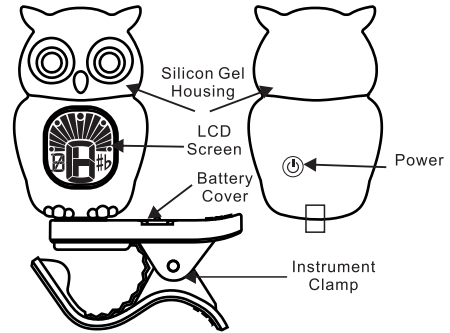

INSTALLING THE BATTERY ILLUSTRATION

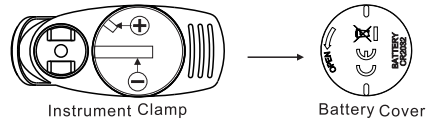 

1. Please open the battery cover , insert a CR2032 battery (attention "+" / "-" charges).
2. If the unit doesn't work , please take battery out and reinstall the battery.
3. When the screen become dark or tuning slowly , replaced a new battery in time.
4. Please do not arbitrarily discard the waste battery.

OPERATION

1. Press the power button and hold on to turn on (off) the tuner. Press the power button continuously to select tuning item out of Chromatic, Guitar, Bass, Ukulele and Violin.
2. Clip on strongest vibrating part of your instrument.
3. As soon as you play a note, the display will show the note name and string number you are playing.
Tuning Accuracy Indicator
Flat: the needle indicator is at the left part of the parameters, the LCD display is orange
Sharp: the needle indicator is at the right part of the parameters, the LCD display is orange
Tuned: the needle indicator is in the middle of the parameters, the LCD display is green
4. The unit will shut off automatically if there is no signal within 5 minutes.
5. If the unit will self-motion memory last time your setting ,if reinstall the battery ,the unit automatically return to initial setting .

SPECIFICATIONS

Tuning : Chromatic, Guitar, Bass, Ukulele, Violin
Tuning way : Clip
Tuning range : A0(27.5Hz)~C8(4186Hz)
Precision : ±1 cent
Power : 3V ,Battery (CR2032)×1
Dimension : 62mm×33mm×51mm(with clip)
Weight : 33g(with clip)
Accessories : Operation manual,
1 piece battery (CR2032)