


OPERATION MANUAL

ILLUSTRATION

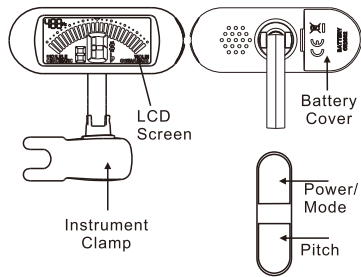

INSTALLATION OF THE BATTERY

Battery Cover



1. Please open the battery cover, insert a CR2032 battery (attention "+" / "-" charges).
2. If the unit doesn't work, please take battery out and reinstall the battery.
3. When the LCD becomes dim or tuning slowly, replace a new battery in time.
4. Please do not arbitrarily discard the waste battery.

OPERATION

1. Press the power/mode button and hold on to turn on (off) the tuner.
2. Press the power/mode button continuously to select turning item out of Chromatic, Violin.
3. Clip on strongest vibrating part of your instrument.
4. Press Pitch to adjust A4 from 410-490Hz (press continuously 1Hz, press&hold 10Hz)
5. When it is in tune, the backlight turns GREEN. When it is Sharp or Flat, the backlight turns ORANGE.
6. The unit will shut off automatically if there is no signal within 5 minutes.
7. The unit will self-motion memory last time your setting, if reinstall the battery, the unit automatic return to initial setting.

SPECIFICATIONS

Tuning Scale: Chromatic, Violin,

Tuning Mode: Vibration

Tuning Range: A0 (27.50Hz)- C8(4186Hz)

Calibration: 410Hz-490Hz

Response Time: <20ms

Precision: ± 1 cent

Power: 3V (CR2032)

Dimensions: 72.8 x 59.2 x 23.4 (mm)

Weight: 30 g

品牌名称	SWIFF
文件名称	说明书
型号	C2
尺寸(长*高)	50*110MM
印刷材质	157g铜版纸
印刷要求	双面单色印刷