


## OPERATION MANUAL

### ILLUSTRATION

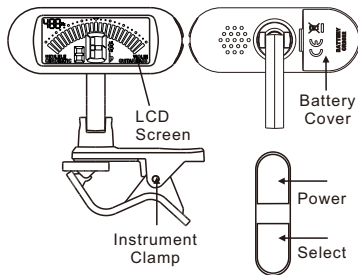

### INSTALLATION OF THE BATTERY

#### Battery Cover



1. Please open the battery cover, insert a CR2032 battery (attention "+" / "-" charges).
2. If the unit doesn't work, please take battery out and reinstall the battery.
3. When the screen become dark or tuning slowly, replace a new battery in time.
4. Please do not arbitrarily discard the waste battery.

### OPERATION

1. Press the power button and hold on to turn on (off) the tuner.
2. Press the power button continuously to select turning item out of Chromatic, Guitar, Bass, Ukulele and Violin.
3. Clip on strongest vibrating part of your instrument.
4. When it is in tune, the backlit turns GREEN. When it is Sharp or Flat, the backlit turns ORANGE.
5. The unit will shut off automatically if there is no signal within 5 minutes.
6. The unit will self-motion memory last time your setting, if reinstall the battery, the unit automatic return to initial setting.

### SPECIFICATIONS

**Tuning Scale:** Chromatic, Guitar, Bass, Violin, Ukulele

**Tuning Mode:** Vibration

**Tuning Range:** A0 (27.50Hz) - C8 (4186Hz)

**Response Time:** 410Hz-490Hz

**Precision:**  $\pm 1$  cent

**Power:** 3V (CR2032)

**Dimensions:** 72.8 x 59.2 x 23.4 (mm)

**Weight:** 30 g

品牌名称	SWIFF
文件名称	说明书
型号	C2
尺寸(长*高)	50*110MM
印刷材质	157g铜版纸
印刷要求	双面单色印刷