



OPERATION MANUAL

ILLUSTRATION

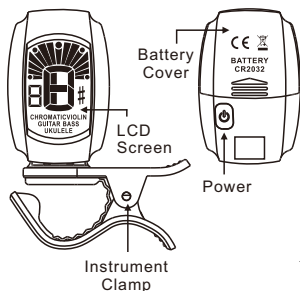

INSTALLATION OF THE BATTERY

 Battery Cover



1. Please open the battery cover , insert a CR2032 battery (attention "+" / "-" charges).
2. If the unit doesn't work , please take battery out and reinstall the battery.
3. When the screen become dark or tuning slowly , replace a new battery in time.
4. Please do not arbitrarily discard the waste battery.

OPERATION

1. Press the power button and hold on to turn on (off) the tuner.
2. Press the power button continuously to select turning item out of Chromatic, Guitar, Bass, Ukulele and Violin.
3. Clip on strongest vibrating part of your instrument.
4. Play a single note, the display will show the note name and the meter moves.
If intonation indicator points to the left : the note is flat.
If intonation indicator points to the right : the note is sharp.
If intonation indicator points to the middle : the note is in Tune.
5. The unit will shut off automatically if there is no signal within 5 minutes.
6. The unit will self-motion memory last time your setting , if reinstall the battery , the unit automatic return to initial setting .

SPECIFICATIONS

Tuning : Chromatic, Guitar, Bass, Ukulele, Violin

Tuning way : Clip

Tuning range : A0(27.5Hz)~C8(4186Hz)

Precision : ± 1 cent

Calibration : A4=440Hz

Power : 3V ,Battery (CR2032)×1

Dimension : 65mm×48mm×20mm

Weight : 20g

Accessories :Operation manual,
1 piece battery (CR2032)